


Baseboard Installation


- 1) Allow for clearances as shown.
- 2) Mount the shelf brackets on the wall spaced 32" apart and 28" from the floor. The height may be varied to suit the height of the operator.
- 3) Place the baseboard on the shelf brackets. Install 2 # 8 x 3/4" screws into the bottom of the baseboard.
- 4) Install the 2" corner braces at the top of the baseboard in line with the same wall studs as the shelf brackets.

CAUTION: If you can not find studs in a plaster board wall you must use steel expansion anchors in place of the screws provided.

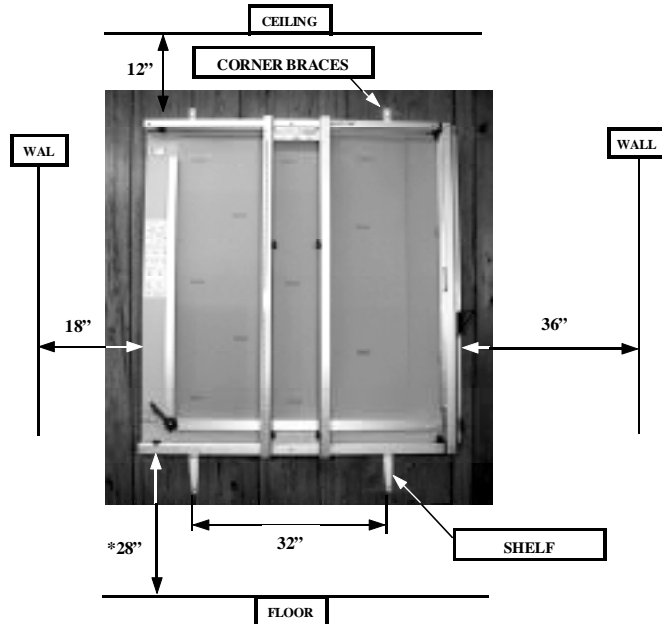

Mounting Hardware

- 1) 2 6" x 8" shelf brackets.
- 2) 6 #10 x 1-1/2" screws.
- 3) 2 2" corner braces.
- 4) 8 #8 x 3/4" screws.

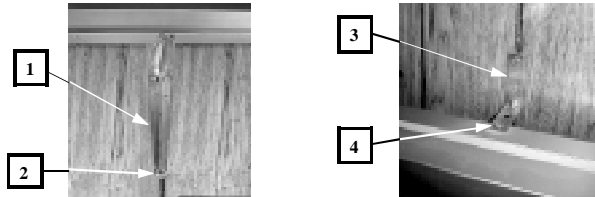

Knife Carriage Installation

- 1) Remove top carriage stops.
- 2) Install left roller in left track.
- 3) Spring right roller into right track.
- 4) Replace top carriage stops.

