
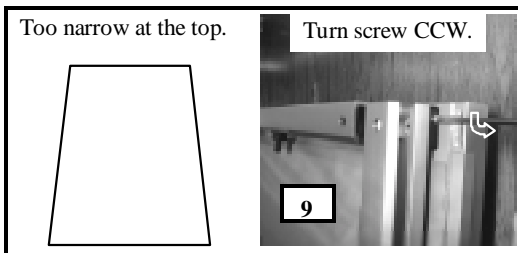
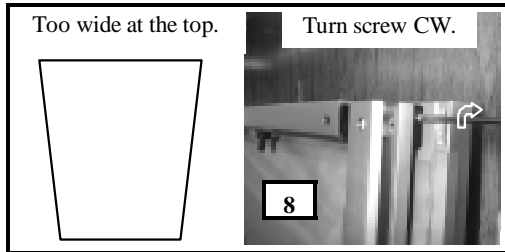
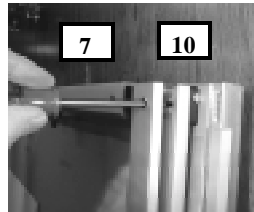


Mat & Glass Sizer Adjustment

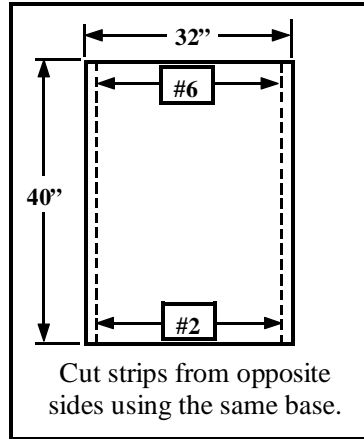

1) Test cutter by cutting narrow (1/2") strips from opposite sides of a full sheet of 32" x 40" matboard. Turn the mat from left to right for the second cut. Mark the top before cutting.

2) Measure the dimension at the bottom of the mat.

3) Loosen the bottom holding screw 1/2 turn with a Phillips screwdriver.

4) Turn the adjust screw clockwise to decrease the dimension or counterclockwise to increase the dimension. One turn = 1/32".

5) Tighten the bottom holding screw.

6) Measure the dimension at the top of the mat.

7) Loosen the top holding screw 1/2 turn with a Phillips screwdriver.

8) If the mat is too wide at the top turn the adjust screw clockwise. One turn = 1/32".

9) If the mat is too narrow at the top turn the adjust screw counterclockwise. One turn = 1/32".

10) Tighten the top holding screw.

Note: The sequence of this adjustment is important. The bottom adjustment should be repeated until accurate and not changed after the top adjustment is completed.