


Special Techniques

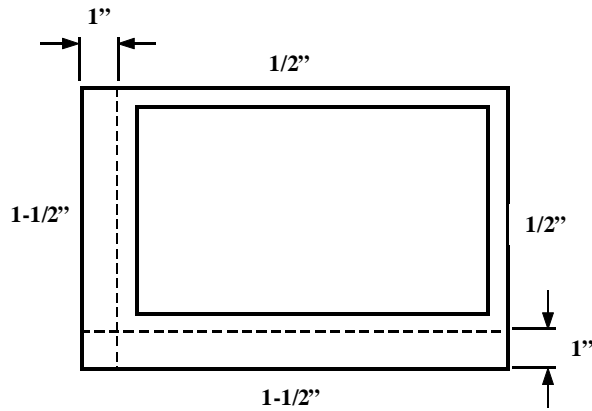


Cutting Borders Less Than 1-1/2"

- 1) Add the difference between 1-1/2" and the desired border to the overall width and height of the mat.
- 2) Cut the mat with the left and bottom borders set at 1-1/2" and the right and top borders set to the desired dimension.
- 3) Trim off the excess on the left and bottom borders.


Double Mat

- 1) Set the borders for the artwork opening with the desired stop spacers in place.
- 2) Remove the stop spacers and cut the face mat. Leave the mat in the machine. Do not open the hold down.
- 3) Cut the outside dimensions of the back mat 1/2" smaller and tape it to the face mat.
- 4) Insert the stop spacers and cut the back mat.

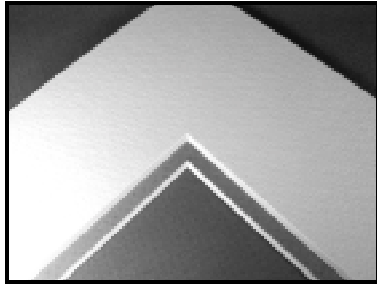

Inlaid Mat

- 1) Set the borders for the artwork opening with the desired stop spacers in place and cut the opening in the inlay mat.
- 2) Remove the stop spacers and cut the outside of the inlay mat. Remove the inlay mat.
- 3) Insert the outer mat and cut the opening to fit the inlay mat.

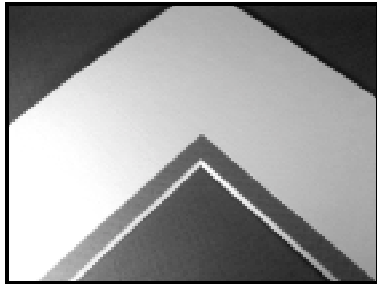

Reverse Bevel Inlaid Mat

- 1) Set the borders for the artwork opening with the desired stop spacers in place and cut the opening in the inlay mat.
- 2) Turn the inlay mat face out. Insert the v-groove stop spacers and cut the outside of the inlay mat. Remove the inlay mat.
- 3) Remove the v-groove stop spacers, insert the outer mat, and cut the opening to fit the inlay mat.

