



Production Stop/Spacers



Install the stop/spacers in the opening at the end of the track. The knife carriage must be removed out of the top of the vertical tracks to install the bottom stops.

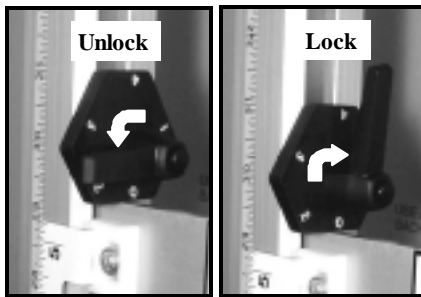

Turn the handle clockwise to lock the stop in position. The handle only requires a rotation of 90 degrees from locked to unlocked. Lift and rotate the adjustable handle to position it in the proper quadrant.

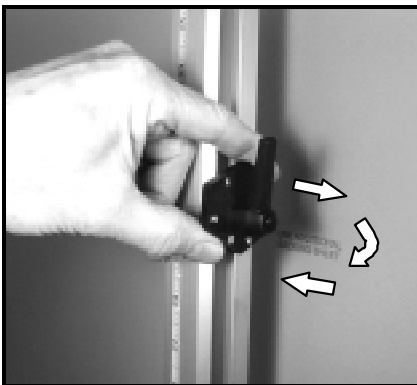

Lift slightly and rotate the spacer block to change the spacing. The block will snap down into the new position. The following spaces are available:

V = 1/16"

1 = 3/16"

2 = 1/4"

3 = 3/8"

4 = 1/2"